




CHARGING BASE

USER MANUAL

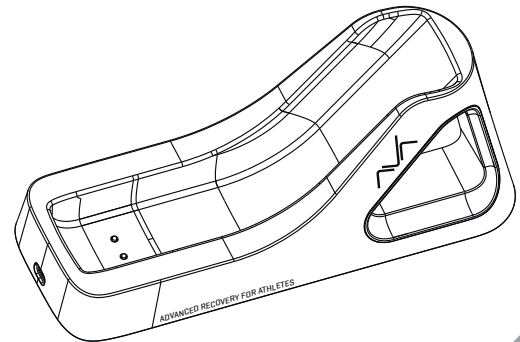

Thanks for your purchase of the **Charging Base**. Please read the manual carefully before use, and pay special attention to the safety precautions for proper operation. This manual provides users with safe and effective operation methods. Please keep it properly after reading.

	Direct current		Do not tumble
	WEEE symbol		Read the User Manual
	Caution! Consult the enclosed documents		This side up
	Fragile		Paper recycling
	Keep dry		Stacking limit by number

SAFETY PRECAUTIONS

You must understand the following before using this product to avoid potential damage or danger!

Always follow these key guidelines when using this product:

- This product is for household use only and is not intended for medical purposes.
- Children must not play with, clean, or maintain this product.
- Do not immerse this product in water; keep it away from water.
- Do not use this product with wet hands.
- Do not place or store the product in areas where it may fall into places like a bathtub or sink.
- Prevent dropping or improper use, as this may cause permanent damage to the product.
- Inspect the charger and other components before each use to ensure they are functioning properly for safe operation.
- Do not alter or modify the product in any way.
- Do not leave the product operating or charging unattended.
- Do not activate the massager while charging.
- Do not throw the device into fire.
- Do not short-circuit the charging base pins, as this can damage the charger or cause the charging base to malfunction.

- Do not operate the device under blankets or pillows. Overheating may result in fire, electric shock, or personal injury.
- Never operate the device if the vents are blocked; ensure that the vents remain free of lint, hair, and other debris.
- Supervise closely when the device is used by, on, or near children and persons with disabilities.
- This device is intended for the purposes described in this Manual only. Do not use any accessories not recommended by the manufacturer.
- Do not operate the device if it is not functioning properly, is damaged, or has fallen into the water.
- Do not insert or drop any objects into any openings.
- Do not use in areas where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the device away from magnetic fields or areas that may be affected by them, as this can cause operational issues.
- Keep the device away from heat sources and avoid using it in high-temperature environments.
- Do not apply excessive force or drop/place heavy objects on the device to prevent malfunctions or damage.
- If you notice high temperatures or unusual odors while using the device, stop using it immediately.

Warning: To reduce the risk of fire, electric shock, or personal injury:

Consult a doctor before use if the product is used by the following individuals:


- Children under 8 years old
- Pregnant women
- Individuals with heart diseases, pacemakers, defibrillators, or metal implants

OVERVIEW

The charging base is designed specifically for charging massage guns and is suitable for charging and placing the massage gun upright.

USAGE

Designed for charging and placing massage guns.

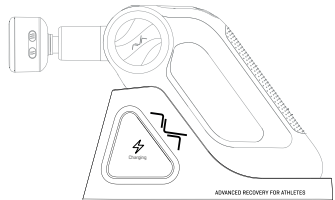

ADVANCED RECOVERY FOR ATHLETES

Informações | Informations



AVA - BRASIL



AVA - PORTUGAL



Modelo: Ava - Pro CB 01
Green Fit Recovery, Lda.
Avenida Engenheiro Duarte Pacheco, Torre 2, 8 andar,
Sala 10, Zip Code: 1070-102, city Lisboa, Portugal;
ID number: 518 096 700;
Resp. Técnico: Rodrigo Santana

CHARGING INSTRUCTIONS

Position the Massage Gun on the Charging Base:


Align the metal contact points of the massage gun with the center of the charging base. Ensure that the gun is placed correctly for efficient charging.

CHARGING PROCESS:

Once properly positioned, the LED indicator on the charging base will begin blinking, signaling that the device is charging. The LED will stop blinking when the massage gun is fully charged.

CHARGING TIME:

The average charging time for the massage gun is approximately 3 hours, depending on the battery level.

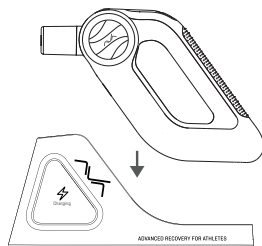


MAIN TECHNICAL SPECIFICATIONS

- Product Name: Charging Base
- Product Model: Ava - Pro CB 01
- Structure Consists mainly of the charging section and a display
- Charging Cradle
- Input: 5.0~3.0A/9. 0V-2.22A/12. 0V-1.67A
- Charging Port: USB-C
- Charging Time: about 3H
- Dimension: 260x92x112mm
- Environmental Conditions:
- Temperature: 41° F-95° F/5° C-35° C
- Relative Humidity: ≤90%;
- Atmospheric Pressure: 70kPa-106kPa

BEFORE USE

- Open the packaging and check whether the main unit and accessories are intact and complete. If there is anything missing or any defects, please contact your supplier immediately.

STEPS

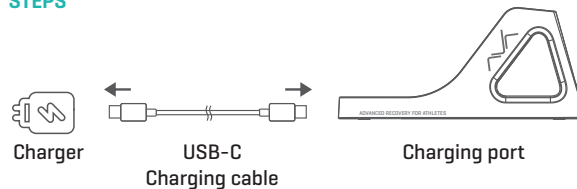

1. Prepare the adapter and use the TYPE-C charging cable to connect the adapter to the input port of the charging base. The green LED on the charging base will light up.
2. Place the charging base with the adapter plugged on a flat surface. Place the massager in the slot of the charging base in the correct orientation. The metal contact pin in the center will connect with the massager to begin charging. During charging, the LED on the charging base will blink to indicate that charging is in progress.

3. The charging time varies depending on the device's condition. The charging base will stop blinking when charging is complete.
4. After use, disconnect the adapter and cable, then put the charging base back in the packaging box.
Note: Do not use a computer or mobile device to charge or power the charging base. Always use the charger provided by the manufacturer.

MAINTENANCE

Use a damp towel to clean the charging base and dry it with a soft cloth.
Store the device in the package box if unused for a long time. Do not unscrew or attempt to disassemble the product.

REPAIRING

Do not disassemble the product yourself. Damage caused by human factors is not covered under the warranty.

INSTALLATION, TRANSPORT, AND STORAGE CONDITIONS OF THE PRODUCT

INSTALLATION CONDITIONS

- Temperature: 5°C 35°C;
- Relative Humidity <90;
- Air Pressure 70kPa~106kPa;

TRANSPORTATION

- Ambient Temperature: -20°C~+50°C;
- Relative Humidity ≤90%;
- This product can be transported by means like car, train, ship, and plane.
- During transportation, this product should be secured to prevent any violent vibration, collision, tumbling, or falling; it should be placed facing upwards, handled with care, placed gently, and kept dry.
- It's strictly forbidden to stack the charging base for more than 5 layers.

STORAGE

- The massager should be stored in a well-ventilated warehouse free of corrosive gases and must be at least 250 mm off the ground.
- It's strictly forbidden to stack the charging base for more than 5 layers.
- Store the charging base in the package box after cleaning if unused for a long time.

PRODUCT WARRANTY

1. Beoka product comes with a one-year free warranty with the purchase receipt.
2. Beoka does not provide free warranty services for the following user-induced failures, such as:
a) Failures caused by unauthorized disassembly and modification of the product;
b) Failures or damages caused by accidental drop during use and handling;
c) Failures due to lack of reasonable maintenance;
d) Failures caused by not following the Manual instructions correctly;
e) Failures caused by improper repairing of entities not authorized by Beoka
3. Repairing services outside the scope of the warranty will be charged according to the relevant policy.
4. For warranty service requests, please call the customer service hotline for consultation.
5. When necessary, product circuit diagrams and information on repairable components can be obtained by Beoka-qualified technicians.
6. The safe service life of the product is 5 years.
7. Please see the main unit or packaging box for the production date.